

MagnaClose

MAGNETIC DEPOSITORY FLAP INSTALL

Items shown below are required to ensure proper installation

1. Clean lint free towel
2. Half and half mixture of isopropyl alcohol and water (spray Bottle)
3. Butane lighter




Please note that it is highly recommended if possible that this procedure be done when the climate is no less than 60 degrees.

Please read all of the installation instructions before starting.



STEP 1: It is very important that the surface area of both the back side of the depository flap and the areas left and right of the depository opening as shown in picture below are clean and free of debris using the half isopropyl alcohol half water mixture. Refer to the noted areas in the image below. Failure to do so will result in improper adhesion of the supplied parts.

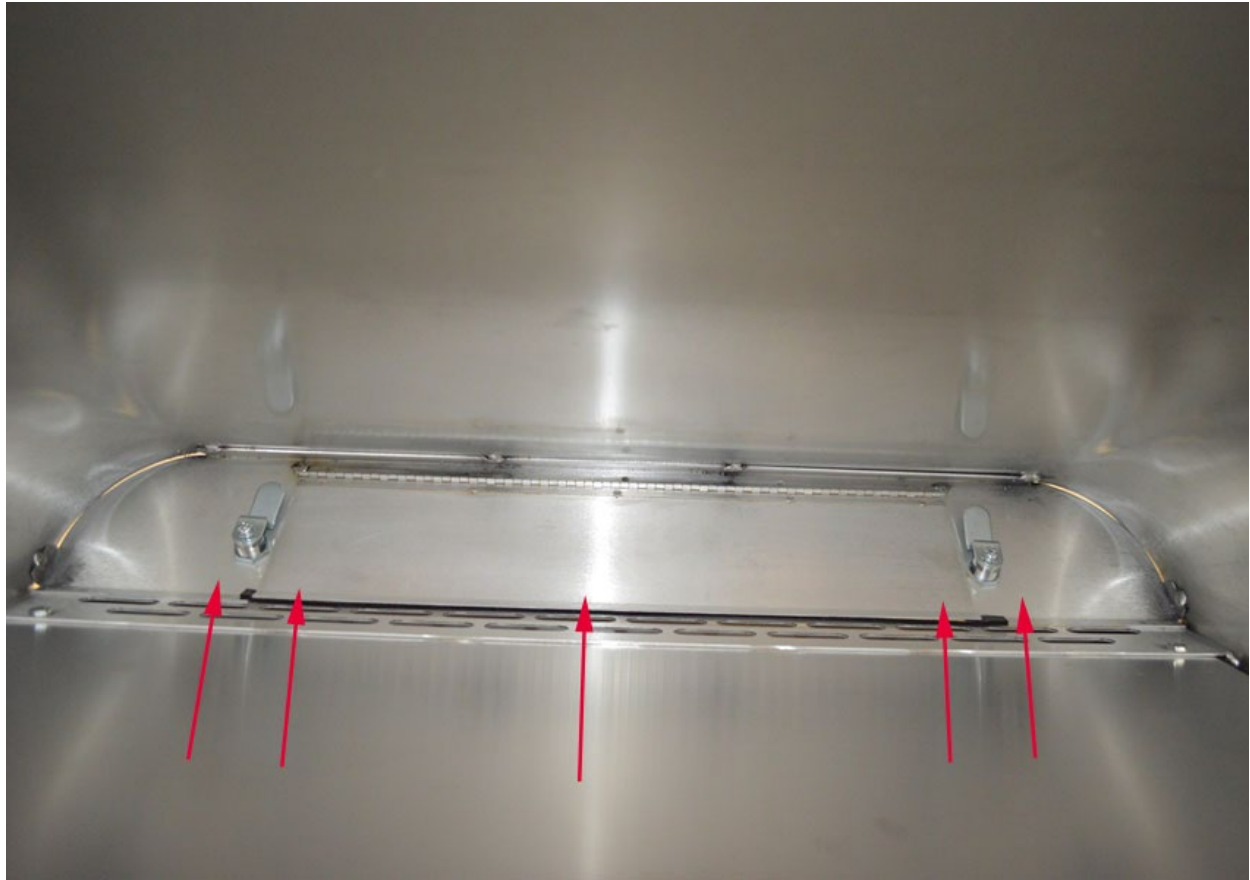




STEP 2: Once the surface area is clean, completely peel back the brown backing tape from the part that has the attached magnets. Using a butane lighter, lightly heat the exposed tape as shown in the picture below (Do Not overheat and burn the adhesive). A light amount of heat is required to warm the adhesive and create enough tack to properly mount the part to the depository flap.





STEP 3: Apply the part with the magnets to the backside of the depository flap. When applying the part with the magnets to the depository flap make sure the part is right above the door flap fold as shown in the image below. Refer to the image below.

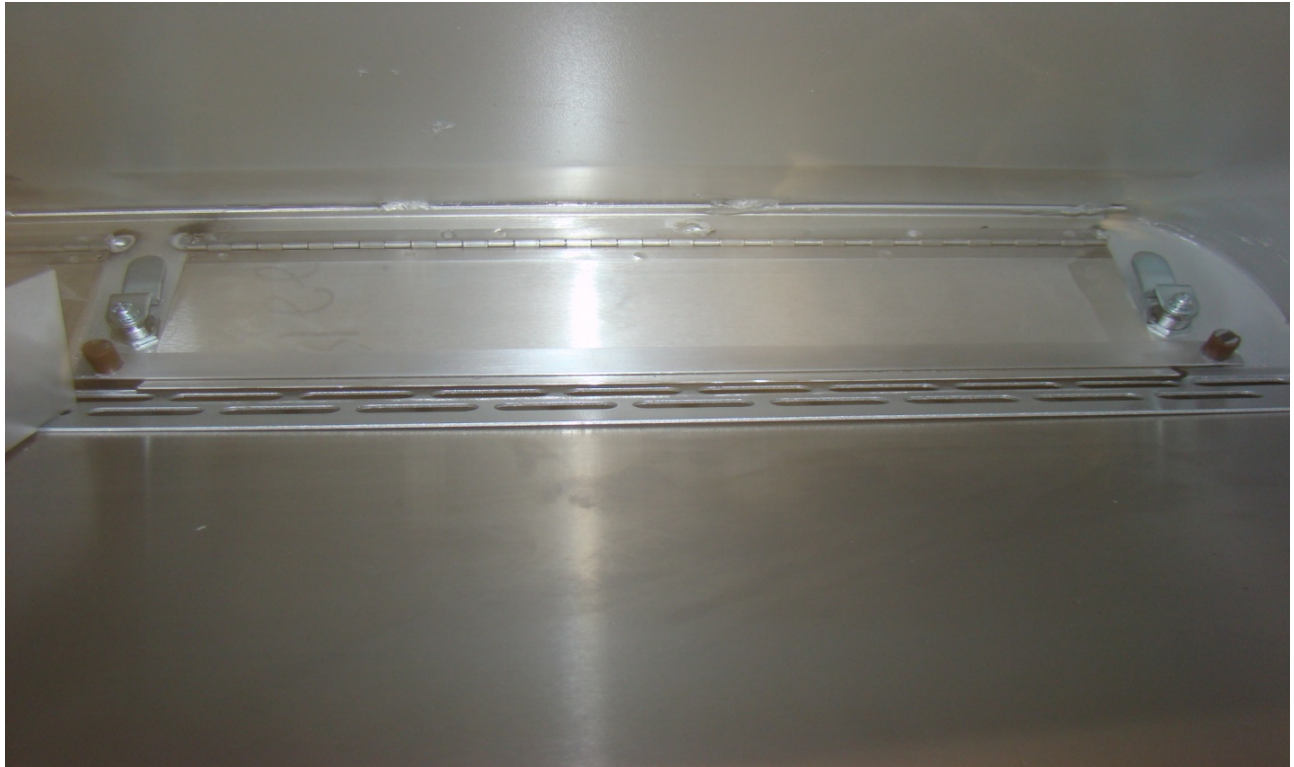



STEP 4: With a marker, mark the resting place of the magnets as shown in the image below. Make sure to clean the surface areas with the alcohol water mixture before starting this step if no done already. Peel back the backing tape from the striker (circular plate) and heat the adhesive using the same process as mentioned previously in step 2. Apply the circular striker to the faceplate at the marked point (refer to picture below). Make sure that the magnet lines up with the circular striker.



Once the Magnetic Kit has been installed, an 8-hour cure time will be required to ensure proper adhesion. We recommend that the depository flap locks are applied and locked during this time and the depository not be used so that the adhesive can set and cure.

STEP 5: We have included a vinyl decal that reads Magnetic flap. The operation of the depository flap will have resistance because of the magnets. We recommend that the supplied wording be applied above the depository opening so that patrons will be aware that the flap is magnetic which will again cause some resistance compared to the flap's normal operation. White and black decals have been supplied so that you can pick which one would be best with the finish of your cabinet.